



Fuse Position

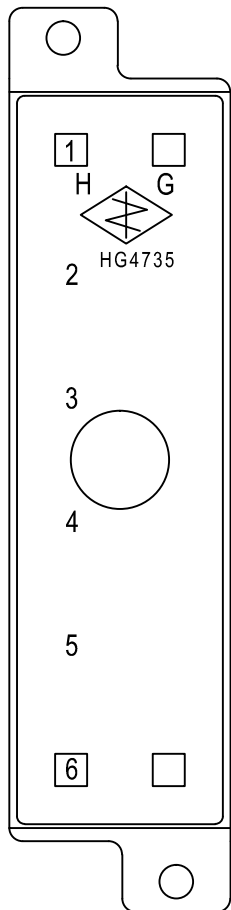

	Position	Description	Rating
1	FU1	All Power	30A
2	FU2	Working Lights	20A
3	FU3	Vibration	5A
4			
5			
6			

Fuse Wiring

Wire Number	Jack
05	A
14	B
38	C
	D
	E
	F

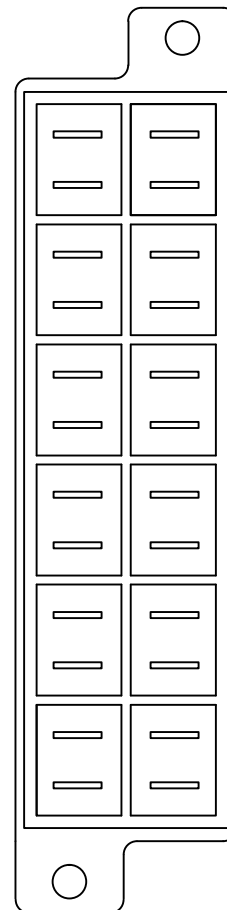

Jack	Wire Number
1	1 06/6b
2	1 05
3	1 6f/6e
4	1
5	1
6	1