


### Fuse Position

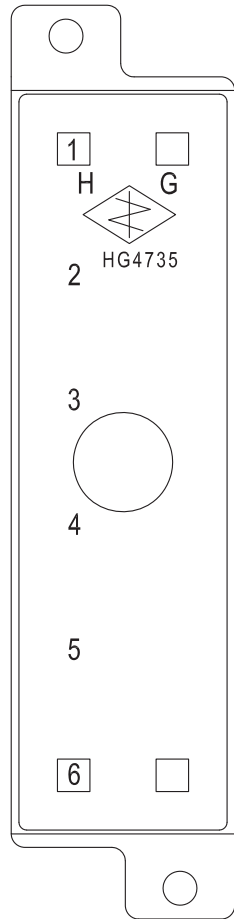

	Position	Description	Rating
1	FU1	All Power	30A
2	FU2	Working Lights	20A
3	FU3	Water Pump	10A
4	FU4	Vibration	5A
5			
6			

### Fuse Wiring

Wire Number	Jack
06	A
23	B
20	C
26	D
	E
	F



Jack	Wire Number
1	7 7e7f
2	7 7
3	7 7
4	7/7a/7d 7
5	
6	