

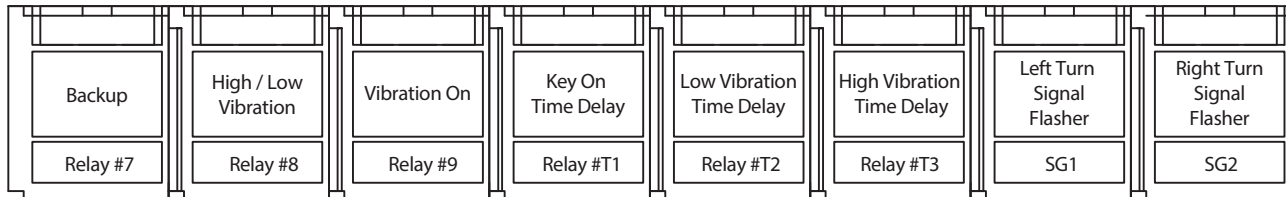
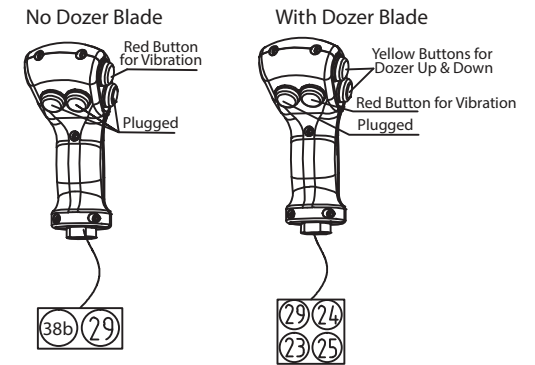


Relay ID	Relay #1	Relay #2	Relay #3	Relay #4-1	Relay #4-2	Relay #5	Relay #6
Relay Position	Wire #	Wire #	Wire #	Wire #	Wire #	Wire #	Wire #
85	4c	32	31	7b	07/7b	11	13
86	-p1	-p1/-p2	-p3/-p2	-p3/-p4	-p5/-p6	-p7/-p6	-p7/-p8
30	01	02	43	6g/6h	-p4/-p5	6h/6k/06	14
87A		k88	k35	09/9a	30	10	
87	05					09/9e	15a/15f

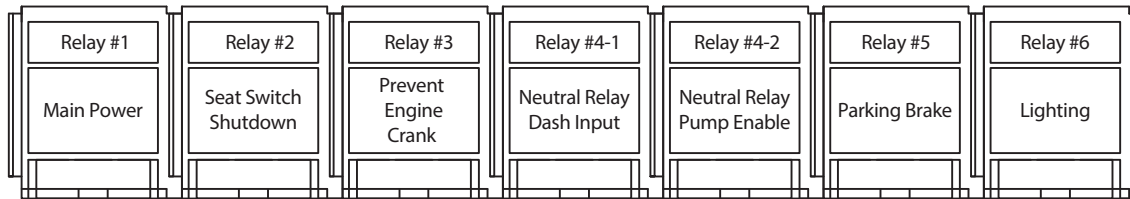

Relay ID	Relay #7	Relay #8	Relay #9	Relay #T1	Relay #T2	Relay #T3	SG1	SG2
Relay Position	Wire #	Wire #	Wire #	Wire #	Wire #	Wire #	Wire #	Wire #
85	16	18b	33	4a/4c	60	18/18b	-p16/-p15	-p16/-p17
86	-p10	-p11/-p10	-p11/-p12	-p13/-p12	-p13/-p14	-p14/-p15	19	20
30	6g/6n	37	38/38b	43	60/60a	36		
87A		60a						
87	17/17e/17a	36	37	03	34	35	21/21a	22/22a

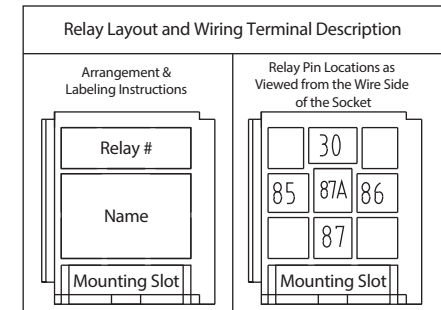

Model: RS70

Relays and Joystick,
Rev 1

© 2025 Third Coast Equipment Inc.
Unauthorized reproduction prohibited.
All rights reserved. Download the latest at:

WWW.THIRDCOASTEQUIPMENT.COM