

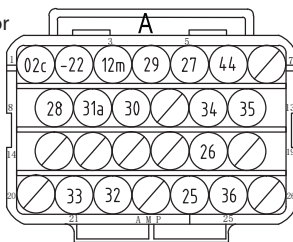


Dash Connector

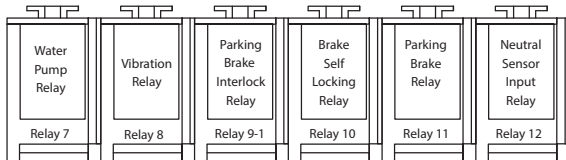


	Relay 1	Relay 2	Relay 4	Relay 5	Relay 6	Relay 9-2
Pin	Wire #	Wire #	Wire #	Wire #	Wire #	Wire #
1	03	33	32	13b	14	43a
2	-9/-10	-10/-11	-11/-12	-13/-14	-15/-16	-16/-17
3	02a	04	09	28	12m/12n/12o	31/31a
4		05	-12/-13	-14/-15		-17
5	12o/12p				15	

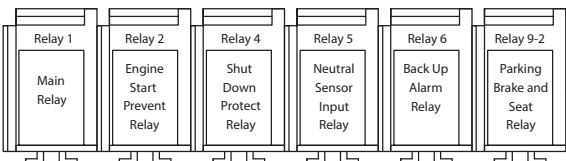

	Relay 7	Relay 8	Relay 9-1	Relay 10	Relay 11	Relay 12
Pin	Wire #	Wire #	Wire #	Wire #	Wire #	Wire #
1	25	36	43	13a/13b	41	45
2	-8/-9	-7/-8	-6/-7	-5/-6	-4/-5	-3/-4
3	18	20	13/13a	12L/12M	12j/12k/12L	12i/12j
4			14a	42a	42	13
5	19	21			43/43a	

	Relay T1
Pin	Wire #
1	03b
2	-2/-3
3	05
4	87A
5	87
6	06

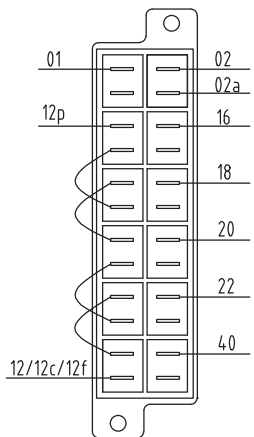

B Fuse Block




Pin	Wire #	Pin	Wire #
N	10	G	-1
IN1	11	OUT	26
IN2		+12V	12i

H Engine RPM Sensor

I Ground


Pin	Wire #
1	-1/-2
2	-18/-19/-20
3	-21/-22/-23

C Light Switch (SA1)

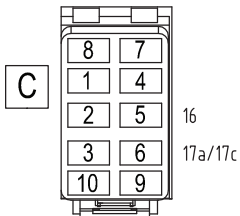

E1 Dash Buttons

 G Key Switch




E Emergency Stop



Pin	Wire #
21	07
22	08

To Vehicle Harness

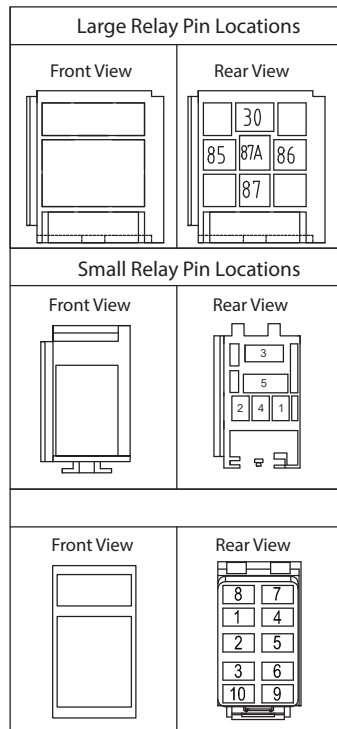

Model: RA12

## Relay, Fuses and Switches Harness V3

© 2026 Third Coast Equipment Inc. Unauthorized reproduction prohibited. All rights reserved. Download the latest at:

[WWW.THIRDCOASTEQUIPMENT.COM](http://WWW.THIRDCOASTEQUIPMENT.COM)