



Fuse Position

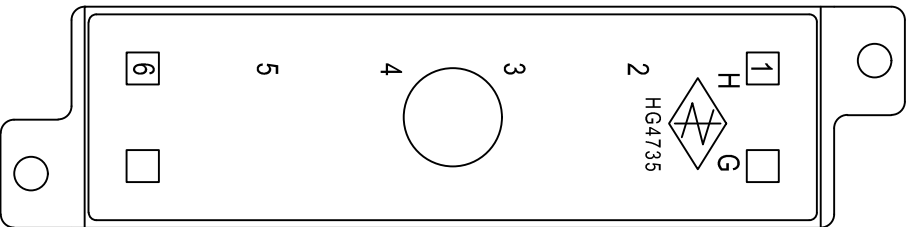

| Position | Description | Rating |
|----------|--------------------|--------|
| 1 | FU1 All Power | 30A |
| 2 | FU2 Working Lights | 20A |
| 3 | FU3 Dozer Blade | 5A |
| 4 | | |
| 5 | | |
| 6 | | |

Fuse Wiring

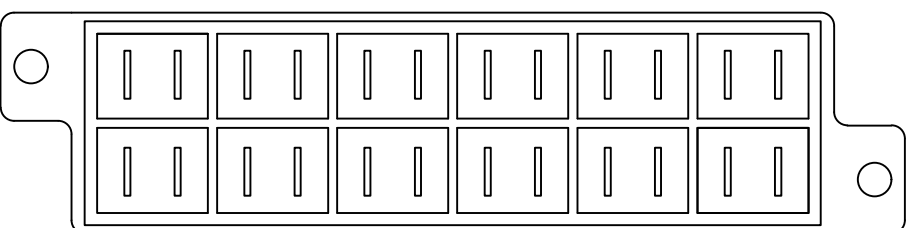

| Wire Number | Jack |
|-------------|------|
| 05 | A |
| 14 | B |
| 23a | C |
| | D |
| | E |
| | F |

| Jack | Wire Number |
|------|----------------|
| 1 | 6d/6e 6b/6c |
| 2 | |
| 3 | |
| 4 | |
| 5 | |
| 6 | |