

 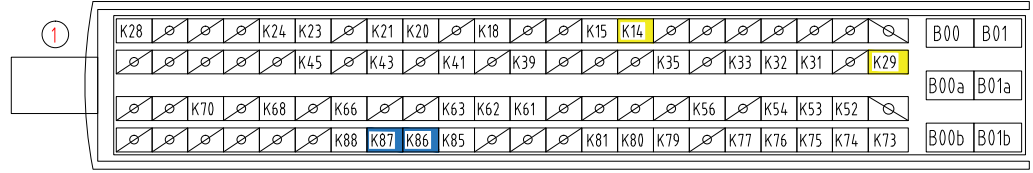
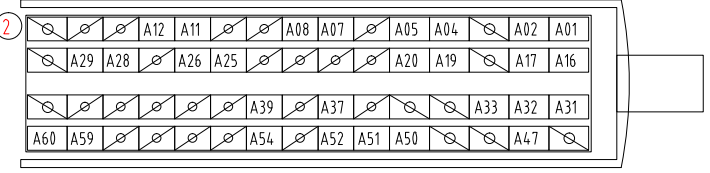


A1	K75	CAN
A2	K53	Connection
A3	A50	E-Stop
A4	K32	
A5	B63	
A6	K88	Ignition Switch
A7	K35	
A8	K43	
A9	K61	Throttle Control
A10	K62	
A11	K18	
A12	K31	DPF Operation Switch
A13	A60	
A14	K86	
A15	K87	



Connect K86 and K87 at the ECU
Connect K14 and K29 at the ECU

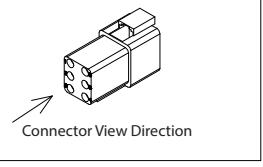