



Ignition Switch

1	B63
2	K88a
3	K35

1	K75	CAN high
2	K53	CAN low
3	A50	E-Stop Switch
4	K32	Throttle Control
5	K44(5V)	
6	K55(0V)	

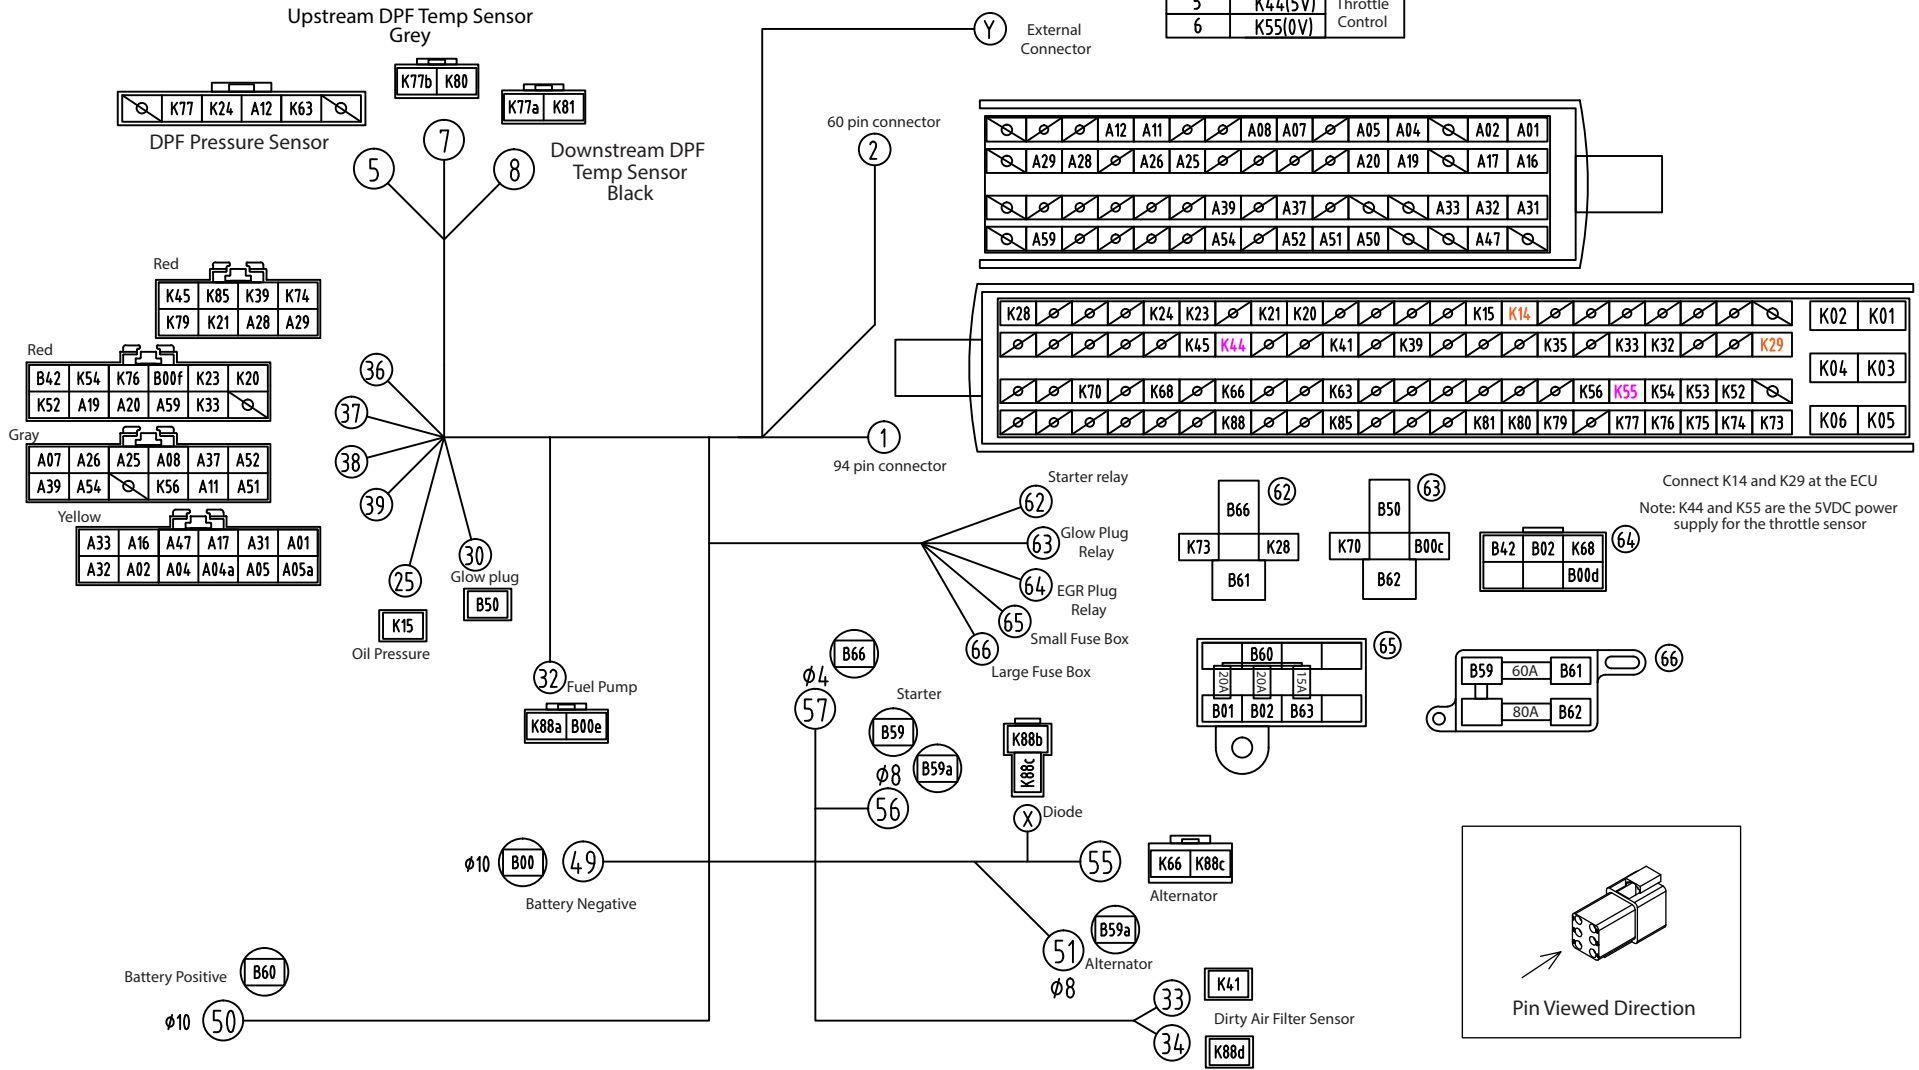

Connect K14 and K29 at the ECU
 Note: K44 and K55 are the 5VDC power supply for the throttle sensor

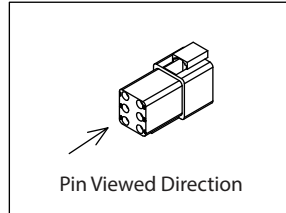

Model: RS50

Engine Harness Rev1

© 2026 Third Coast Equipment Inc.
 Unauthorized reproduction prohibited.
 All rights reserved. Download the latest at:
WWW.THIRDCOASTEQUIPMENT.COM

Upstream DPFTemp Sensor

Grey