



Engine Connector

Pin #	Wire #
1	K75
2	K53
3	A50
4	K32
5	K43
6	K61
7	K62
8	K18
9	A60
10	K31
11	K86
12	K87
13	B63
14	K88
15	K35

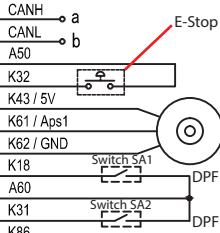

	B	R	ACC	C	BT
PRE-HEATING					
OFF					
ON					
START					

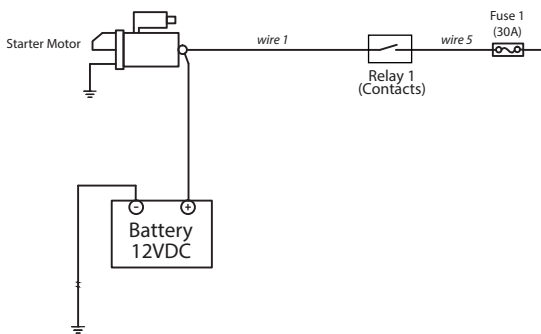

Connection to Dash

Pin	Function
A1	Battery Power +12V
A2	Ground
A3	Key On Power +12V
A4	Fuel Level Input
A5	Dash Button Input
A6	Hydraulic Filter Input
A7	Neutral Switch Input
A8	Seat Switch Input
A9	Relay 4-2 (Contacts)
A10	Relay 4-2 (Contacts)
A11	Relay 4-2 (Contacts)
A12	Vibration Switch Input
A13	CAN 1 L
A14	Relay 3 (Coil)
A15	Relay 2 (Coil)
A16	Relay 2 (Coil)
A17	Relay 2 (Coil)
A18	Relay 2 (Coil)
A19	Relay 2 (Coil)
A20	Relay 2 (Coil)
A21	Relay 2 (Coil)
A22	Relay 2 (Coil)
A23	Relay 2 (Coil)
A24	Relay 2 (Coil)
A25	Relay 2 (Coil)
A26	Relay 2 (Coil)

Turn Signal and Light Switch

Lights	Headlight	Turn Signal		
		Right	Left	Interior
Turn	Right	Left	Interior	

